

## Citroen V40.40

ECU Type	Recognize	Read-clear Dtc.	Data Stream	Actuation	Special Function
<b>CITROEN ZX-16</b>					
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFV BOSCH M7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.6L N6A BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.4L KFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
2.0L RFS MM1AP	√	<i>err. Code</i>	<i>data</i>		
ABS	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
AL4 TA2000 A/T	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
AL4 TA96 A/T	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
<b>CITROEN ZX-2</b>					
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFV BOSCH M7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.6L N6A BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.4L KFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
2.0L RFS MM1AP	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN ELYSEE</b>					
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	

1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
ABS 5.3	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>		
Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
AL4 TA96 A/T	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
Simens center airbag	√	<i>err. Code</i>	<i>data</i>		
AUTOLIV center airbag	√	<i>err. Code</i>	<i>data</i>		1.Ecu set
electron key	√	<i>err. Code</i>	<i>data</i>	√	1.Program set
<b>CITROEN C1</b>					
DV4 injection	√	<i>err. Code</i>	<i>data</i>		
Sequential manual gearbox (MMT)		<i>err. Code</i>	<i>data</i>	√	1.Specific operations
ABS anti-lock braking system		<i>err. Code</i>	<i>data</i>	√	1.Specific operations
ESP S2000 ABS	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Specific operations
Electric power steering	√	<i>err. Code</i>	<i>data</i>		1.configuration
<b>CITROEN XSARA PICASSO</b>					
1.6L NFV BOSCH M7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME7.4.5	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.Ecu set
2.0L RFN MAGNETI MARELLI MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
2.0L RFN MAGNETI MARELLI MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
NFS BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
NFU BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
N6A BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
6FZ SAGEM S2000PM1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
6FZ SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HY BOSCH EDC16C3 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HZ(FAP) BOSCH EDC16C34 EV6TED4	√	<i>err. Code</i>	<i>data</i>		
BSI	√	<i>err. Code</i>	<i>data</i>	√	1.Programming of keys
AUTOLIV center airbag	√	<i>err. Code</i>			1.manual add 2.Ecu unlocked
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS BOSCH 5.3	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
ESP BOSCH 5.7	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed 2.Ecu set
ABS 8.0 Without esp8.0	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed 2.manual add
ABR 5.3	√	<i>err. Code</i>	<i>data</i>		
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration

ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8.0 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
alarm	√	<i>err. Code</i>	<i>data</i>	√	1.manual add
IP	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
radio	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
conversion module below steering wheel	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Diesel additive function(ADDGO2)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
A/C	√	<i>err. Code</i>	<i>data</i>	√	1.Ecu set 2.Configuration
Multifunction display VDO B	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
Multifunction display VDO C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
PTS	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN XSARA PICASSO CHINE</b>					
2.0L BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
N6A BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
NFU BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
9HY BOSCH EDC16C3 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
6FZ SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
6FZ SAGEM S2000PM1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
NFS BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

1.6L NFV BOSCH M744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RFN MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Diesel additive function(ADDGO2)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		

Airbag/SAC AUTOLIV	√	<i>err. Code</i>			1.configuration
AC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SIEMENS C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ESP BOSCH5.7	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
<b>CITROEN XSARA 2</b>					
2.0L RFN MAGNETI MARELLI MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
2.0L RHY BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>		
8HZ BOSCH EDC16C3(DV4)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RFS MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
RHY SIEMENS SID801	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RFN MM4MP2	√	<i>err. Code</i>	<i>data</i>	√	
1.4L KFW SAGEM S2000P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
AUTOLIV center airbag	√	<i>err. Code</i>	<i>data</i>		1.manual add 2.Ecu unlocked
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS BOSCH 5.3	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
ESP BOSCH 5.7	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed 2.Ecu set

BSI_VAR_C	√	<i>err. Code</i>		√	
IP	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
display	√	<i>err. Code</i>	<i>data</i>	√	1.manual add
radio	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
A/C	√	<i>err. Code</i>	<i>data</i>	√	1.Ecu set 2.Configuration
Multifunction display A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display ATUOPC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
PTS	√	<i>err. Code</i>	<i>data</i>	√	
conversion module below steering wheel	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C2 CHINA</b>					
1.4L KfV SAGEM J34P	√	<i>err. Code</i>	<i>data</i>	√	1.manual add
1.6L NFU BOSCH ME7.4.5	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.Ecu set
BSI	√	<i>err. Code</i>	<i>data</i>	√	1.Programming of keys
ABS MK70	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed 2.manual add
A/C	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration
AUTOLIV center airbag	√	<i>err. Code</i>			1.manual add 2.Ecu unlocked
Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
IP	√	<i>err. Code</i>	<i>data</i>	√	1.manual add 2.Configuration

Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
conversion module below steering wheel	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN XSARA</b>					
2.0L RFV BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFS MM1AP	√	<i>err. Code</i>	<i>data</i>		
1.8L LFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP7.2	√	<i>err. Code</i>	<i>data</i>		
1.4L KFX BOSCH MP7.3	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.4L KFX SAGEM SL96	√	<i>err. Code</i>	<i>data</i>	√	
1.8L LFY SAGEM SL96	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RHY BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L DHV BOSCH AS3VP20	√	<i>err. Code</i>	<i>data</i>		
Auto gearbox AL4 TA96	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS mechanical distribution	√	<i>err. Code</i>	<i>data</i>		
ABS electronic distribution	√	<i>err. Code</i>	<i>data</i>		
Airbag/SAC AFK	√	<i>err. Code</i>			
Air Conditioning	√	<i>err. Code</i>	<i>data</i>		
BSI	√	<i>err. Code</i>		√	
CONTROL PANEL	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RADIO	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD PLAYER	√	<i>err. Code</i>	<i>data</i>	√	
display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	
ALARM	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN C5</b>					
3.0L XFX BOSCH ME7.4.6	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives
2.0L RLZ SIEMENS SIRIUS81	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
2.0L RFN MAGNETI MARELLI MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives



2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
1.8L 6FZ SAGEM S2000P	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives
6FZ SAGEM S2000PM1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.2L 4HX BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHY BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHS BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHY SIEMENS SID801	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS TEVES MK60	√	<i>err. Code</i>	<i>data</i>	√	
ESP TEVES MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
Auto gearbox 4HP20	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Airbag/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
BSI	√	<i>err. Code</i>	<i>data</i>	√	
RADIO	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel additive function(ADDITIF FAP)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel additive function(ADDGO2)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
CONTROL PANEL	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Display or autoPC telematics	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>		
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>		
AC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

Multifunction display SAGEM A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SIEMENS C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display ATUOPC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display VDO D	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ALARM	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN NEW C5</b>					
4HP BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HY BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>		
9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
6FZ SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
XFU BOSCH ME747	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
XFV BOSCH ME747	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
6FY MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RHL SIEMENS SID803	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHL SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
4HR BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
4HS BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.2L 4HX BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
4HT BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR SIEMENS SID803	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Auto gearbox AM6	√	<i>err. Code</i>	<i>data</i>	√	
Alarm	√	<i>err. Code</i>			
BSI	√	<i>err. Code</i>			
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Diesel additive function(ADDGO3)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ERU_BSM	√	<i>err. Code</i>	<i>data</i>	√	
Auto gearbox 4HP20	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
ESP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.calibration of the steering wheel sensor 3.Initialise ESP sensors
Multifunction screen SAGEM A	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen SAGEM C	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Power Steering	√	<i>err. Code</i>			
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Deflation detection	√	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check

rain sensor/brightness	√	<i>err. Code</i>			
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
steering wheel with fixed central control	√	<i>err. Code</i>	<i>data</i>	√	
Directional headlamps(PROJECTEURS)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Vehicle height sensor programming
AC	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN C5 (X7)</b>					
6FY MM6KP(EW7A)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
9HZ(FAP) BOSCH EDC16C34 DV6TED4110CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RFJ MM6KP(EW10A)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives 3.matching
RFJ MM6KP BIO Flex(EW10A FF)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR DELPHI DCM3.4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHF DELPHI DCM3.4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
UHZ SIEMENS SID201	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.matching
X8Z-DT20C EDC17CP11	√	<i>err. Code</i>	<i>data</i>		
RHH DCM3.5	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHE DCM3.5	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
XFU BOSCH ME747	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
XFV BOSCH ME747	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
4HP BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
4HR BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

4HS BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
4HT BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
Auto gearbox AL4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Auto gearbox AM6	✓	<i>err. Code</i>	<i>data</i>	✓	
CFC300P	✓	<i>err. Code</i>	<i>data</i>	✓	
BVA AT6 Euro5	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
BVA AM6 Euro5	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Oil wear counter
Rain sensor/brightness	✓	<i>err. Code</i>			
Hands Free Kit	✓	<i>err. Code</i>	<i>data</i>	✓	
Driver's door module/MDP CONDUCT	✓	<i>err. Code</i>	<i>data</i>	✓	
CD player	✓	<i>err. Code</i>	<i>data</i>	✓	
Electric power steering	✓	<i>err. Code</i>	<i>data</i>	✓	
Control panel	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Telematic NG4 navigation radio	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Telematic RNEG navigation radio	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Telematic RT3	✓	<i>err. Code</i>	<i>data</i>	✓	
Telematic RT4	✓	<i>err. Code</i>	<i>data</i>	✓	
Telematic RT5	✓	<i>err. Code</i>	<i>data</i>	✓	
AC	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Multifunction screen C	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Parking aid	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Airbag/SAC AUTOLIV	✓	<i>err. Code</i>	<i>data</i>		1.Configuration
Radio	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Engine relay unit	✓	<i>err. Code</i>	<i>data</i>	✓	
Switch module at the steering wheel	✓	<i>err. Code</i>	<i>data</i>	✓	
Stop and Start battery charge status unit	✓	<i>err. Code</i>	<i>data</i>		1.configuration
Battery charge status unit	✓	<i>err. Code</i>	<i>data</i>		1.configuration

Deflation detection	✓	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
Directional headlamps(PROJECTEURS)	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
ESP8.1 BOSCH	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
<b>CITROEN C6</b>					
UHZ SIEMENS SID201	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.matching
XFU BOSCH ME747	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
XFV BOSCH ME747	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
4HP BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
4HR BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
4HS BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
4HT BOSCHE DEC16CP39 DW12BTED4	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
Auto gearbox AM6	✓	<i>err. Code</i>	<i>data</i>	✓	
BVA AM6 Euro5	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Oil wear counter
ESP8.1 BOSCH	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
Rain sensor/brightness	✓	<i>err. Code</i>			
CD player	✓	<i>err. Code</i>	<i>data</i>	✓	
Electric power steering	✓	<i>err. Code</i>	<i>data</i>	✓	
Parking aid	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
Hands Free Kit	✓	<i>err. Code</i>	<i>data</i>	✓	
Driver's door module/MDP CONDUCT	✓	<i>err. Code</i>	<i>data</i>	✓	
AC	✓	<i>err. Code</i>	<i>data</i>	✓	
Colour Multifunction display	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration

Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Stop and Start battery charge status unit	√	<i>err. Code</i>	<i>data</i>		1.configuration
Battery charge status unit	√	<i>err. Code</i>	<i>data</i>		
Deflation detection	√	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
ESP VSC440	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
<b>CITROEN C3</b>					
1.1L HFX MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.6L NFU BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.4L KFV SAGEM S2000 PM1	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
N6A BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator 2.configuration 3.Initialise auto - adaptives
NFS BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
KFU MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
KFV BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

KFV SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HX BOSCH EDC16C34 DV6ATED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX SIEMENS SID802	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX SIEMENS SID804	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ SIEMENS SID804	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HY DELPHI C6	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS TEVES MK60	√	<i>err. Code</i>	<i>data</i>	√	
ABS TEVES MK70	√	<i>err. Code</i>	<i>data</i>	√	
ESP TEVES MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
Controlled manual gearbox ECU	√	<i>err. Code</i>	<i>data</i>	√	1.Specific operations
Airbag/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Air Conditioning	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SAGEM A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction display SIEMENS C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
BSI	√	<i>err. Code</i>	<i>data</i>		
RADIO	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
ALARM	√	<i>err. Code</i>	<i>data</i>	√	
CONTROL PANEL	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel additive function(ADDGO2)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
DISPLAY	√	<i>err. Code</i>	<i>data</i>	√	
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adapatives 3.Oil counter



**CITROEN C4**

1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME7.4.5	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HX BOSCH EDC16C34 DV6ATED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HV BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HY BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>		
9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR DELPHI DCM3.4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
N6A BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
NFU BOSCH ME749	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RFK MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
KFU MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RFN MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
6FY MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RHF DELPHI DCM3.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
5FX MED17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

5FW MEV17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
5FT MED17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR SIEMENS SID803	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHR SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
AC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Auto gearbox AM6	√	<i>err. Code</i>	<i>data</i>	√	
CFC300P	√	<i>err. Code</i>	<i>data</i>	√	
BVA AM6 Euro5	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Oil wear counter
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Alarm	√	<i>err. Code</i>	<i>data</i>		
BSI	√	<i>err. Code</i>			
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic NG4 navigation radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	

Telematic RT5	√	<i>err. Code</i>	<i>data</i>	√	
engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Multifunction screen SAGEM A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction screen SAGEM C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
passenger door module	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
rain sensor/brightness	√	<i>err. Code</i>			
SRS/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
steering wheel with fixed central control	√	<i>err. Code</i>	<i>data</i>	√	
Deflation detection	√	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
unit rev counter	√	<i>err. Code</i>	<i>data</i>		
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
Directional headlamps(PROJECTEURS)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Vehicle height sensor programming
Diesel additive function(ADDGO3)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
<b>CITROEN C4 PICASSO</b>					
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
6FY MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
5FX MED17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

5FW MEV17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
5FT MED17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RHE DCM3.5	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RHH DCM3.5	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHD DCM3.5	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RHJ SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
RHR SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Auto gearbox AM6	√	<i>err. Code</i>	<i>data</i>	√	
BVA AM6 Euro5	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Oil wear counter
CFC300P	√	<i>err. Code</i>	<i>data</i>	√	
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Rain sensor/brightness	√	<i>err. Code</i>			
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RNEG navigation radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT5	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	

Deflation detection	✓	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
Battery charge status unit	✓	<i>err. Code</i>	<i>data</i>		1.Configuration
Passenger's door module/MDP PASSAG	✓	<i>err. Code</i>	<i>data</i>	✓	
Directional headlamps(PROJECTEURS)	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Vehicle height sensor programming
Airbag/SAC AUTOLIV	✓	<i>err. Code</i>	<i>data</i>		1.Configuration
<b>CITROEN C4 SEDAN</b>					
N6A BOSCH ME749	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
9HZ(FAP) BOSCH EDC16C34 DV6TED4110CV	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
9HX BOSCH EDC16C34 DV6ATED490CV	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RFJ MM6KP (EW10A FF)	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RFJ MM6KP BIO Flex(EW10A FF)	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RHM BOSCH EDC15C2 DW10A	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RHS BOSCH EDC15C2 DW10A	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RHT BOSCH EDC15C2 DW10A	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RHW BOSCH EDC15C2 DW10A	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
RHZ BOSCH EDC15C2 DW10A	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
NFU BOSCH ME749	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
1.6L N6A BOSCH ME745	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives

1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8. BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Rain sensor/brightness	√	<i>err. Code</i>			
CD player	√	<i>err. Code</i>	<i>data</i>	√	
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT5	√	<i>err. Code</i>	<i>data</i>	√	
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	

Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Directional headlamps(PROJECTEURS)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Vehicle height sensor programming
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
<b>CITROEN NEW C3</b>					
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME7.4.5	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
TU3A J34P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
TU1A J34P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
KFU MM6LPC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ SIEMENS SID806	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
KFV SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	
9HX BOSCH EDC16C34 DV6ATED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS MK70.1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

ESP MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
ESP MK60-O	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
ABS MK70	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
AC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Controlled manual gearbox ECU	√	<i>err. Code</i>	<i>data</i>	√	1.Specific operations
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Alarm	√	<i>err. Code</i>	<i>data</i>		
BSI	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT5	√	<i>err. Code</i>	<i>data</i>	√	
electric power steering	√	<i>err. Code</i>	<i>data</i>		
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
engine relay unit	√	<i>err. Code</i>	<i>data</i>		
multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
rain sensor/brightness	√	<i>err. Code</i>			
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
SRS/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN C3 PLURIEL</b>					
8HZ BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ SIEMENS SID806	√	<i>err. Code</i>	<i>data</i>		
TU3A J34P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives



TU1A J34P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Controlled manual gearbox ECU	√	<i>err. Code</i>	<i>data</i>	√	1.Specific operations
ABS MK70	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS MK70.1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ESP MK60-O	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
ESP MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
CD player	√	<i>err. Code</i>	<i>data</i>	√	
electric power steering	√	<i>err. Code</i>	<i>data</i>		
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
rain sensor/brightness	√	<i>err. Code</i>			
control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT5	√	<i>err. Code</i>	<i>data</i>	√	
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
SRS/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C3 PICASSO</b>					
8FS MEV17.4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives
9HZ(FAP) BOSCH EDC16C34 DV6TED4110CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HX BOSCH EDC16C34 DV6ATED490CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
5FW MEV17.4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
ABS MK70.2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ESP MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration 2.locking 3.unlocking
rain sensor/brightness	√	<i>err. Code</i>			
electric power steering	√	<i>err. Code</i>	<i>data</i>		
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Type"A"(segments)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Type"C"(dot matrix)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	
Control panel	√	<i>err. Code</i>	<i>data</i>	√	
Battery charge status unit	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Teleamtic RNEG navigation radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C3 AIRCROSS</b>					
N6A-N6B-NFU BOSCH ME749	√	<i>err. Code</i>	<i>data</i>		

N6A-N6B-NFU BOSCH ME749 BIOFLEX	√	<i>err. Code</i>	<i>data</i>		
ABS MK70.2	√	<i>err. Code</i>	<i>data</i>		
Air condition System	√	<i>err. Code</i>	<i>data</i>		
Alarm	√	<i>err. Code</i>	<i>data</i>		
AT/Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>		
Instrument panel	√	<i>err. Code</i>	<i>data</i>		
Parking assistance	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>	<i>data</i>		
Rain sensor	√	<i>err. Code</i>			
Services module	√	<i>err. Code</i>	<i>data</i>		
Airbag/sac_autoliv	√	<i>err. Code</i>	<i>data</i>		
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
Telematic	√	<i>err. Code</i>	<i>data</i>		
Trailer relay unit	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C3 A51</b>					
5FR MED17.4	√	<i>err. Code</i>	<i>data</i>		
5FS MEV17.4	√	<i>err. Code</i>	<i>data</i>		
8FP MEV17.4	√	<i>err. Code</i>	<i>data</i>		
8FR MEV17.4	√	<i>err. Code</i>	<i>data</i>		
HFV V34.1	√	<i>err. Code</i>	<i>data</i>		
KFT V34.1	√	<i>err. Code</i>	<i>data</i>		
TU1A J34P	√	<i>err. Code</i>	<i>data</i>		
TU3A J34P	√	<i>err. Code</i>	<i>data</i>		
8HR BOSCH EDC17C10 DV4CTED-70 CV	√	<i>err. Code</i>	<i>data</i>		
8HZ EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>		
9HP BOSCH EDC17C10 DV6DTED- 90 CV	√	<i>err. Code</i>	<i>data</i>		
9HP EDC 17 C10_BR2- DV6DTED - 92 CV	√	<i>err. Code</i>	<i>data</i>		
9HR HDI SID807	√	<i>err. Code</i>	<i>data</i>		
9HX BOSCH EDC16C34 DV6ATED4 90CV	√	<i>err. Code</i>	<i>data</i>		
ABS MK70.2	√	<i>err. Code</i>	<i>data</i>		
ESP MK60	√	<i>err. Code</i>	<i>data</i>		
Air condition System	√	<i>err. Code</i>	<i>data</i>		
Alarm	√	<i>err. Code</i>	<i>data</i>		
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>		
Battery charge	√	<i>err. Code</i>	<i>data</i>		

Driver's door module	√	<i>err. Code</i>	<i>data</i>		
Engine relay unit	√	<i>err. Code</i>	<i>data</i>		
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>		
High frequency receiver	√	<i>err. Code</i>	<i>data</i>		
Instrument panel	√	<i>err. Code</i>	<i>data</i>		
Type"A"(segments) /EMF_A	√	<i>err. Code</i>	<i>data</i>		
Type "C" (dot matrix)/EMF_C	√	<i>err. Code</i>	<i>data</i>		
Multiplexed diesel additive pump	√	<i>err. Code</i>	<i>data</i>		
Parking assistance	√	<i>err. Code</i>	<i>data</i>		
Battery charge status unit	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Power steering	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>			
Rain sensor	√	<i>err. Code</i>	<i>data</i>		
Services module	√	<i>err. Code</i>	<i>data</i>		
sac_autoliv	√	<i>err. Code</i>	<i>data</i>		
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
Trailer relay unit	√	<i>err. Code</i>	<i>data</i>		
Telematic	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C-CROSSER</b>					
ABS anti-lock braking system CAN.xls	√	<i>err. Code</i>	<i>data</i>		
Electronic stability program CAN.xls	√	<i>err. Code</i>	<i>data</i>		
Air conditioning	√	<i>err. Code</i>	<i>data</i>		
Driver's door control panel	√	<i>err. Code</i>	<i>data</i>		
4HK BOSCH EDC16CP39	√	<i>err. Code</i>	<i>data</i>		
4HN BOSCH EDC16CP39	√	<i>err. Code</i>	<i>data</i>		
AFZ 4B11 MIVEC EURO4	√	<i>err. Code</i>	<i>data</i>		
SFY 4B12 MIVEC EURO5	√	<i>err. Code</i>	<i>data</i>		
SFZ 4B12 MIVEC EURO4	√	<i>err. Code</i>	<i>data</i>		
Gear level (DCT)	√	<i>err. Code</i>	<i>data</i>		
BOITE_GETRAG CAN.xls	√	<i>err. Code</i>	<i>data</i>		
Gearbox CVT CAN.xls	√	<i>err. Code</i>	<i>data</i>		
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>		
Headlamp beam corrector	√	<i>err. Code</i>	<i>data</i>		
Instrument panel	√	<i>err. Code</i>	<i>data</i>		
Locking and immobiliser control module	√	<i>err. Code</i>	<i>data</i>		

Navigation	√	<i>err. Code</i>	<i>data</i>		
Passenger's door switch panel	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>	<i>data</i>		
Rain and light sensor	√	<i>err. Code</i>	<i>data</i>		
Rear final drive piloted clutch	√	<i>err. Code</i>	<i>data</i>		
Rear LH door switch panel	√	<i>err. Code</i>	<i>data</i>		
Rear RH door switch panel	√	<i>err. Code</i>	<i>data</i>		
sac_trw	√	<i>err. Code</i>	<i>data</i>		
Steering wheel angle sensor	√	<i>err. Code</i>	<i>data</i>		
Sun roof	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C2 VAN</b>					
1.1L HFX MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.6L NFU BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
1.4L KFV SAGEM S2000 PM1	√	<i>err. Code</i>	<i>data</i>	√	1.mutomatic regulator
KFV SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	
NFS BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
8HZ SIEMENS SID804	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX SIEMENS SID804	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX SIEMENS SID802	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS TEVES MK70	√	<i>err. Code</i>	<i>data</i>	√	
ESP TEVES MK60	√	<i>err. Code</i>	<i>data</i>		
Controlled manual gearbox ECU	√	<i>err. Code</i>	<i>data</i>	√	1.Specific operations
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Airbag/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Air Conditioning	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
BSI	√	<i>err. Code</i>	<i>data</i>		1.Programming of keys
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		

Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Rain sensor/brightness	√	<i>err. Code</i>	<i>data</i>		
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
ALARM	√	<i>err. Code</i>	<i>data</i>	√	
CONTROL PANEL	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
DISPLAY	√	<i>err. Code</i>	<i>data</i>	√	
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN XANTIA</b>					
1.8L LFY SAGEM SL96	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFT BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>		
2.0L RFY BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>		
1.9L DHX BOSCH AS3VP20	√	<i>err. Code</i>	<i>data</i>		
2.1L P8C LUCAS EPIC	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFV BOSCH MP5.1.1	√	<i>err. Code</i>			
1.8L LFY BOSCH MP5.1.1	√	<i>err. Code</i>			
2.0L RGX BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFV BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L R6E BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.8L LFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
3.0L XFZ BOSCH MP7.0	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN XANTIA 2</b>					
2.0L RFV BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHY BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RGX BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L R6E BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
2.1L P8C LUCAS EPIC	√	<i>err. Code</i>	<i>data</i>		
1.9L DHX BOSCH AS3VP20	√	<i>err. Code</i>	<i>data</i>		
1.8L LFY SAGEM SL96	√	<i>err. Code</i>	<i>data</i>	√	
1.8L LFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
1.8L LFY BOSCH MP7.3	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.6L BFZ MM48P	√	<i>err. Code</i>	<i>data</i>	√	
3.0L XFZ BOSCH MP7.0	√	<i>err. Code</i>	<i>data</i>	√	
AIRBAG AND SEATBELT(SAC_AKF)	√	<i>err. Code</i>			1.Program set

LEFT SIDE AIRBAG	√	<i>err. Code</i>		√	
RIGHT SIDE AIRBAG	√	<i>err. Code</i>		√	
CPH(CPH_TEXTON)	√	<i>err. Code</i>	<i>data</i>	√	1.Program set
ABS(TEVES_MK20E)	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
<b>CITROEN SAXO</b>					
1.4L KFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
1.6L NFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
1.6L NFT BOSCH M7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
1.6L NFZ BOSCH MP7.2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP5.1	√	<i>err. Code</i>	<i>data</i>		
1.6L NFX MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
1.4L KFX BOSCH MP7.3	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.4L KFW SAGEM S2000	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
1.0L CDY/CDZ BOSCH MA3.1	√	<i>err. Code</i>			
1.1L HDY/HDZ BOSCH MA3.1	√	<i>err. Code</i>			
1.1L HFX BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
AT	√	<i>err. Code</i>	<i>data</i>		
ABS	√	<i>err. Code</i>	<i>data</i>	√	1.air bleed
AUTOLIV CENTRAL airbag	√	<i>err. Code</i>	<i>data</i>		1.Ecu set
Electric key	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN C8 VAN</b>					
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
3FZ MM4MP2	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
RFN MM4MP2	√	<i>err. Code</i>	<i>data</i>	√	

RFN MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
3FZ MM6LP	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
3.0L XFW BOSCH ME746	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
2.2L 4HW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHT BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHM BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic receiver command	√	<i>err. Code</i>	<i>data</i>		
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>		
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>		
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Multifunction display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic unit	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	
Airbag/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Diesel additive function(ADDITIF FAP)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel additive function(ADDGO2)	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Air conditioning	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Additional heating	√	<i>err. Code</i>	<i>data</i>		
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter



Auto gearbox 4HP20	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
ABR5.7	√	<i>err. Code</i>	<i>data</i>		
ESP BOSCH5.7	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
<b>CITROEN Triomphe</b>					
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS	√	<i>err. Code</i>	<i>data</i>	√	
Airbag	√	<i>err. Code</i>	<i>data</i>	√	
BSI	√	<i>err. Code</i>	<i>data</i>	√	1.Programming of keys
Automatic A/C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Alarm	√	<i>err. Code</i>	<i>data</i>	√	
Multifunction display C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Engine service box	√	<i>err. Code</i>	<i>data</i>	√	
Parking assistance	√	<i>err. Code</i>	<i>data</i>	√	
Power steering	√	<i>err. Code</i>	<i>data</i>		
Instrument cluster	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Driver door module	√	<i>err. Code</i>	<i>data</i>	√	
Passenger door module	√	<i>err. Code</i>	<i>data</i>	√	
Rain sensor/Brightness	√	<i>err. Code</i>			
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Adjustable Headlight	√	<i>err. Code</i>	<i>data</i>	√	
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	

Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
Directional headlamps(PROJECTEURS)	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Vehicle height sensor programming
Tachometer control box	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN BERLINGO</b>					
1.1L HDY/HDZ BOSCH MA3.1	√	<i>err. Code</i>			
1.1L HFX BOSCH M7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
1.4L KFW SAGEM S2000	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
1.4L KFX SAGEM SL96	√	<i>err. Code</i>	<i>data</i>	√	
1.4L KFX BOSCH MP7.3	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.6L NFU BOSCH ME7.4.4	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
1.8L LFX MM1AP	√	<i>err. Code</i>	<i>data</i>		
2.0L RHY BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
RHY SIEMENS SID801	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS electronic distribution	√	<i>err. Code</i>	<i>data</i>		
Airbag TRW/(SAC TRW)	√	<i>err. Code</i>			
Airbag AUTOLIV/(SAC AKF)	√	<i>err. Code</i>			
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
<b>CITROEN BERLINGO 2</b>					
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
KFV SAGEM S2000PM1	√	<i>err. Code</i>	<i>data</i>	√	1.configuration

KFV SAGEM S2000PM2	√	<i>err. Code</i>	<i>data</i>	√	
NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
TU3A J34P	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
9HX BOSCH EDC16C34 DV6ATED4	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RHY SIEMENS SID801	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP BOSCH5.7	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
ESP8.0 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
Additional heating(Chauff-add)	√	<i>err. Code</i>			
Airbag/SAC AUTOLIV)	√	<i>err. Code</i>			1.configuration
BSI	√	<i>err. Code</i>			
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD player(Changeur-cd)	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	
Alarm(Alarme_texton)	√	<i>err. Code</i>			
Switch module at the steering wheel(COM2000)	√	<i>err. Code</i>	<i>data</i>		
Rain sensor/Brightness(Pluie_luminosite)	√	<i>err. Code</i>	<i>data</i>		
Multifunction display SAGEM A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

Multifunction display SAGEM B	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
<b>CITROEN BERLINGO (B9)</b>					
9HT BOSCH EDC16C34 DV6BUTED475CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HT BOSCH EDC16C34 DV6BTED475CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HZ(FAP) BOSCH EDC16C34 DV6TED4110CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HX BOSCH EDC16C34 DV6AUTED490CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HX BOSCH EDC16C34 DV6ATED490CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HV FAP BOSCH EDC16C34 DV6TED4B90CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
9HS FAP BOSCH EDC16C34 DV6TED4B690CV	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFR BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFS BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
1.6L NFU BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Rain sensor/brightness	√	<i>err. Code</i>			
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RNEG navigation radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	

Deflation detection	✓	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
Battery charge status unit	✓	<i>err. Code</i>	<i>data</i>		1.Configuration
Hands Free Kit	✓	<i>err. Code</i>	<i>data</i>	✓	
Type"A"(segments)	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
Type"C"(dot matrix)	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
AC	✓	<i>err. Code</i>	<i>data</i>	✓	1.Configuration
Airbage/SAC AUTOLIV	✓	<i>err. Code</i>	<i>data</i>		1.Configuration 2.locking 3.unlocking
<b>CITROEN C2 CANBUS</b>					
KFU MM6LPC	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration
TU1A J34P	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
TU3A J34P	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
N6A BOSCH ME745	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
NFU BOSCH ME745	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
NFR BOSCH ME745	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
NFS BOSCH ME745	✓	<i>err. Code</i>	<i>data</i>	✓	1.configuration 2.Initialise auto - adaptives
KFV SAGEM S2000PM2	✓	<i>err. Code</i>	<i>data</i>	✓	

9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HZ BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
8HX BOSCH EDC16C34 DV4TD	√	<i>err. Code</i>			
8HZ SEIMENS SID806	√	<i>err. Code</i>	<i>data</i>		
AC	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Alarm	√	<i>err. Code</i>			
BSI	√	<i>err. Code</i>			
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
TELEMATIC RT3	√	<i>err. Code</i>	<i>data</i>	√	
TELEMATIC RT4	√	<i>err. Code</i>	<i>data</i>	√	
TELEMATIC RT5	√	<i>err. Code</i>	<i>data</i>	√	
ABS MK70	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS MK70.1	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ESP MK60	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration 3.Initialisation
ESP MK60-O	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Calibration
Controlled manual gearbox ECU	√	<i>err. Code</i>	<i>data</i>	√	1.Specific operations
ECU reversible stopstart alternator	√	<i>err. Code</i>			
electric power steering	√	<i>err. Code</i>	<i>data</i>		
engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
rain sensor -brightness	√	<i>err. Code</i>			
SRS/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Trailer relay unit	√	<i>err. Code</i>			
Hands free kit	√	<i>err. Code</i>			
High frequency receiver	√	<i>err. Code</i>			
<b>CITROEN C8 CANBUS</b>					
BSI	√	<i>err. Code</i>			

Petrol/RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Diesel/4HP BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/4HR BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/4HS BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/4HT BOSCHE DEC16CP39 DW12BTED4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/RHR SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/RHK SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/2.2L 4HW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/2.0L RHT BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/2.0L RHM BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/2.0L RHW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel additive_function	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Airbag/SAC TEMIC	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Gearbox ECU/Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Gearbox ECU/Auto gearbox AM6	√	<i>err. Code</i>	<i>data</i>	√	
Gearbox ECU/BVA AM6 Euro5	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Oil wear counter
Anti-lock brake system/ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Anti-lock brake system/ESP8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
Multifunction screen/Colour multifunction display	√	<i>err. Code</i>			
Multifunction screen/Multifunction display SIEMENS C	√	<i>err. Code</i>			
Telematics/Telematics(RT3)	√	<i>err. Code</i>	<i>data</i>	√	
Telematics/Telematics(RT4)	√	<i>err. Code</i>	<i>data</i>	√	
Instrument panel	√	<i>err. Code</i>			
Air conditioning	√	<i>err. Code</i>	<i>data</i>	√	
Multifunction display SIMENS C	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
alarm	√	<i>err. Code</i>			

Control panel	√	<i>err. Code</i>	<i>data</i>	√	
engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Power steering	√	<i>err. Code</i>			
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Rain sensor/Brightness	√	<i>err. Code</i>			
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>	√	
Parking aid	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Deflation detection	√	<i>err. Code</i>	<i>data</i>		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
Sliding side doors module	√	<i>err. Code</i>			
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN DISPATCH 3 / JUMPY3</b>					
BSI	√	<i>err. Code</i>			
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Telematic RNEG navigation radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Parking assistance	√	<i>err. Code</i>			
Air conditioning	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction screen A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Rear air conditioning panel	√	<i>err. Code</i>			
Switch module at the Steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
alarm	√	<i>err. Code</i>			
Rain sensor/Brightness	√	<i>err. Code</i>			
Airbag/SAC BOSCH	√	<i>err. Code</i>	<i>data</i>		1.Configuration
Multifunction screen/Multifunction screen A	√	<i>err. Code</i>			



Multifunction screen/Multifunction screen C	√	<i>err. Code</i>			
Telematics/Telematics(RT3)	√	<i>err. Code</i>	<i>data</i>	√	
Telematics/Telematics(RT4)	√	<i>err. Code</i>	<i>data</i>	√	
Telematics/Telematics(RT5)	√	<i>err. Code</i>	<i>data</i>	√	
Petrol/RFH MM6KP	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto -
Diesel/9HU BOSCH EDC16C34 DV6UTD490CV	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/RHR SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/RHK SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Diesel/RHG SIEMENS SID803A	√	<i>err. Code</i>	<i>data</i>		
ABS/ESP8_BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Calibration
ABS/ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABS/ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
ABS/ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Power steering/Electric power steering ECU	√	<i>err. Code</i>			
Pneumatic suspension/Suspension	√	<i>err. Code</i>			
Additional heating(KWP)	√	<i>err. Code</i>			
Trailer relay unit	√	<i>err. Code</i>			
engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Rain sensor/brightness	√	<i>err. Code</i>			
Electric power steering	√	<i>err. Code</i>	<i>data</i>	√	
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	
Bodywork Conversion Unit	√	<i>err. Code</i>			
<b>CITROEN DISPATCH / JUMPY</b>					
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
2.0L RHX BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L DHX BOSCH AS3VP20	√	<i>err. Code</i>	<i>data</i>		
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration

Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN DISPATCH 2 / JUMPY 2</b>					
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
2.0L RHX BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHW BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN XM</b>					
2.0L R6E BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RGY BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFZ BOSCH MP5.1	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RGX BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>	√	
2.0L RFV BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
3.0L XFZ BOSCH MP7.0	√	<i>err. Code</i>	<i>data</i>	√	
2.5L THY BOSCH MSA11 VP36	√	<i>err. Code</i>	<i>data</i>		
2.0L RFV BOSCH MP5.1.1	√	<i>err. Code</i>			
ABS TEVES MK20E	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN XM mux</b>					
2.5L THY MSA11 7.6 VP36	√	<i>err. Code</i>	<i>data</i>		
ABS TEVES MK20E	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN JUMPER 3 / RELAY 3</b>					
DCU-102 4HU PUMA 120 CV	√	<i>err. Code</i>	<i>data</i>		
DCU-102 4HV PUMA 100 CV	√	<i>err. Code</i>	<i>data</i>		
EDC16C39 SOFIM 3.0 145 CV FAP	√	<i>err. Code</i>	<i>data</i>		
EDC16C39 SOFIM 3.0 145 CV	√	<i>err. Code</i>	<i>data</i>		

ABS8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	
ASR8.0	√	<i>err. Code</i>	<i>data</i>		
ESP8 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN JUMPER 3 Minibus/RELAY 3 Minibus</b>					
DCU-102 4HU PUMA 120 CV	√	<i>err. Code</i>	<i>data</i>		
DCU-102 4HV PUMA 100 CV	√	<i>err. Code</i>	<i>data</i>		
EDC16C39 SOFIM 3.0 145 CV FAP	√	<i>err. Code</i>	<i>data</i>		
EDC16C39 SOFIM 3.0 145 CV	√	<i>err. Code</i>	<i>data</i>		
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN SYNERGIE/EVASION</b>					
2.0L RFN MM48P	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
2.0L RGX BOSCH MP3.2	√	<i>err. Code</i>	<i>data</i>	√	
1.9L DHX BOSCH AS3VP20	√	<i>err. Code</i>	<i>data</i>		
2.0L RFV BOSCH MP7.3	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
2.0L RHW BOSCH EDC15C2	√	<i>err. Code</i>		√	1.Configuration
2.0L RHZ BOSCH EDC15C2	√	<i>err. Code</i>		√	1.Configuration
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
Airbag/SAC CENT AUTOLIV	√	<i>err. Code</i>			1.Configuration
<b>CITROEN C 15</b>					
1.9L WJY LUCAS DCN2	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration
<b>CITROEN C-QUATRE 4</b>					
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives

Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
<b>CITROEN C-QUATRE 5</b>					
1.6L N6A BOSCH ME745	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
RFJ MM6LPB	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ESP8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
CD player	√	<i>err. Code</i>	<i>data</i>	√	

Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Rain sensor/brightness	√	<i>err. Code</i>			
Driver's door module/MDP CONDUCT	√	<i>err. Code</i>	<i>data</i>	√	
Radio	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Control panel	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Telematic RT3	√	<i>err. Code</i>	<i>data</i>	√	
Telematic RT4	√	<i>err. Code</i>	<i>data</i>	√	
Engine relay unit	√	<i>err. Code</i>	<i>data</i>	√	
Switch module at the steering wheel	√	<i>err. Code</i>	<i>data</i>	√	
Passenger's door module/MDP PASSAG	√	<i>err. Code</i>	<i>data</i>	√	
AC	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Multifunction screen C	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Airbag/SAC AUTOLIV	√	<i>err. Code</i>	<i>data</i>		1.Configuration
<b>CITROEN FUKANG</b>					
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Auto gearbox AL4 TA96	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN FUKANG 988</b>					
1.4L KFX BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFZ BOSCH MP5.2	√	<i>err. Code</i>	<i>data</i>	√	
1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
Auto gearbox AL4 TA96	√	<i>err. Code</i>	<i>data</i>	√	1.configuration

Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
ABR5.3	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C-ELYSEE 4</b>					
1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives
Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto -
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration
Airbag/SAC SIEMENS	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN DS3</b>					
Trailer relay unit	√	<i>err. Code</i>	<i>data</i>		
Engine relay unit	√	<i>err. Code</i>	<i>data</i>		
Electric power steering	√	<i>err. Code</i>	<i>data</i>		
Telematic	√	<i>err. Code</i>	<i>data</i>		
8FR MEV17.4	√	<i>err. Code</i>	<i>data</i>		
8FP MEV17.4	√	<i>err. Code</i>	<i>data</i>		
5FS MEV17.4	√	<i>err. Code</i>	<i>data</i>		
5FS MEV17.4.2	√	<i>err. Code</i>	<i>data</i>		
8FP MEV17.4.2	√	<i>err. Code</i>	<i>data</i>		
8FR MEV17.4.2	√	<i>err. Code</i>	<i>data</i>		
5FR MED17.4	√	<i>err. Code</i>	<i>data</i>		
5FF MED17.4	√	<i>err. Code</i>	<i>data</i>		
9HP BOSCH EDC17C10 DV6DTEĐ90 CV	√	<i>err. Code</i>	<i>data</i>		
8HR BOSCH EDC17C10 DV4CTEĐ70 CV	√	<i>err. Code</i>	<i>data</i>		
9HR HDI SID807	√	<i>err. Code</i>	<i>data</i>		
9HP EDC 17 C10_BR2DV6DTEĐ-92CV	√	<i>err. Code</i>	<i>data</i>		
Auto gearbox AL4	√	<i>err. Code</i>	<i>data</i>		
Air conditioning	√	<i>err. Code</i>	<i>data</i>		
Alarm	√	<i>err. Code</i>	<i>data</i>		
Hands Free Kit	√	<i>err. Code</i>	<i>data</i>		
Radio	√	<i>err. Code</i>	<i>data</i>		

ESP MK60	√	<i>err. Code</i>	<i>data</i>		
ABS MK70.2	√	<i>err. Code</i>	<i>data</i>		
Airbag	√	<i>err. Code</i>	<i>data</i>		
Rain sensor/Brightness	√	<i>err. Code</i>	<i>data</i>		
Switch module under the steering wheel	√	<i>err. Code</i>	<i>data</i>		
Parking aid	√	<i>err. Code</i>	<i>data</i>		
High frequency receiver	√	<i>err. Code</i>	<i>data</i>		
Battery charge status unit	√	<i>err. Code</i>	<i>data</i>		
Type"A"	√	<i>err. Code</i>	<i>data</i>		
Type"C"	√	<i>err. Code</i>	<i>data</i>		
Instrument panel	√	<i>err. Code</i>	<i>data</i>		
Multiplexed diesel additive pump	√	<i>err. Code</i>	<i>data</i>		
Telematics unit independent	√	<i>err. Code</i>	<i>data</i>		
<b>CITROEN C-ELYSEE 5</b>					
1.6L NFU BOSCH ME744	√	<i>err. Code</i>	<i>data</i>	√	1.configuration 2.Initialise auto - adaptives
NFU J35	√	<i>err. Code</i>	<i>data</i>	√	1.Initialise auto - adaptives 2.Configuration
Auto gearbox AL4 TA2000	√	<i>err. Code</i>	<i>data</i>	√	1.Configuration 2.Initialise auto - adaptives 3.Oil counter
Airbag/SAC SIEMENS	√	<i>err. Code</i>	<i>data</i>		
ABS8.1 BOSCH	√	<i>err. Code</i>	<i>data</i>	√	1.configuration